

Previous model number: 5400

Active-Passive Neutron Crate Counter (Differential Die-Away)

N2940-2552

Introduction


The ANTECH N2940-2552 Active-Passive Crate Counter is an enhanced efficiency active/passive neutron counter designed for the measurement of plutonium and uranium in nuclear wastes contained in a variety of crates and waste boxes. It can be configured to the customer's requirements to measure a variety of waste boxes including B25 Box or the Standard Waste Box (SWB). The inner assay chamber walls contain a thick graphite liner that extends the neutron slowing-down time and enhances the thermal neutron interrogating flux.

The neutron detection system consists of cadmium shielded ^3He proportional counters, typically in a 4π geometry. The detectors are positioned vertically in each of the four side walls and detectors in the top and bottom of the instrument are positioned horizontally. The detectors in each of the four walls are connected to a high voltage junction box that contains an Amptek charge sensitive amplifier and discriminator circuit and connections for high voltage, low voltage and signal cables.

Polyethylene back shielding is provided to reduce the effects of ambient background. The outer surface of the counter is covered in stainless steel cladding and the graphite liner is clad in aluminium. Additional detector packages are mounted on the interior walls of the chamber cavity to acquire information on the degree of interrogating neutron self-shielding in fissile material. Flux monitors are installed to correct for waste matrix bias effects.

The D-T neutron generator (Thermo Fisher Zetatron accelerator) is normally mounted in the roof of the chamber to provide a uniform interrogation of the crate during the assay. In conventional active totals mode pulses of neutrons are used to interrogate a waste drum. A neutron generator is pulsed at 100 Hz producing 14-MeV neutrons, which are slowed down in the graphite layer providing a source of thermal neutrons that cause induced fission of the ^{235}U and ^{239}Pu in the waste. Cadmium shielded detector packages are used to measure the prompt fission neutrons (from induced fission) in a time period ($\sim 500 \mu\text{s}$) when neutrons from the initial generator burst have been cleared from the fast detector packages. Additional ^3He flux monitors are placed in the measurement chamber and provide a measure of the interrogating neutron intensity and its die away characteristics. A later time period is used to determine the background due to delayed neutron production from fission products and from any spontaneous fission neutrons present. The fissile mass is proportional to the net fissile signal normalised to the interrogating flux. The system must be calibrated for uranium and plutonium mass using representative matrices.

The passive mode operation uses conventional neutron counting of the correlated neutrons arising from spontaneous fission of the even plutonium nuclides, principally ^{240}Pu . Plant measured isotopic ratios (from high resolution gamma spectrometry) can be used by the software in order to convert $^{240}\text{Pu}_{\text{effective}}$ mass to total plutonium mass.

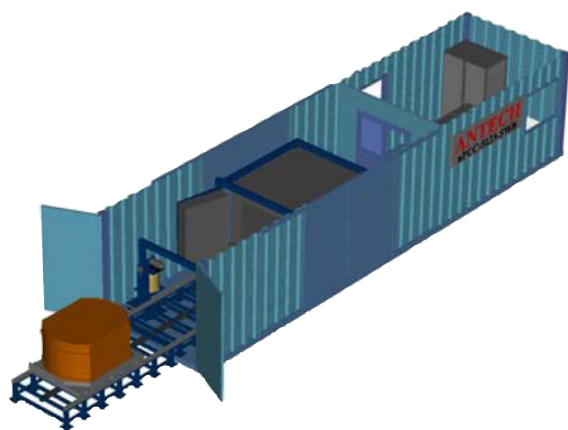

Features

- Robust construction avoiding 'high-Z' materials to reduce interfering neutron background
- Measurement chamber lined with graphite to produce a long neutron die away time
- Semi-automatic crate or box loading capability
- Fitted with a Thermo Fisher Scientific (formally MF Physics) neutron generator of proven high reliability
- Typically, 24 fast neutron detector packages (4 in either of the two sides, the top and bottom and the two ends), each containing 4 x ^3He tubes (4 atmospheres fill pressure)
- Nuclear counting electronics includes the ANTECH Universal Neutron Counter (N2000) and the ANTECH TTL to LDS Converter Module (A2000-15).
- Optional High Purity Germanium (HPGe) gamma-ray spectrometer for plutonium isotopic ratio determination

Benefits

- Capable of both 'active' operation for the measurement of fissile nuclides combined with a conventional 'passive' mode capability for the measurement of the fertile nuclides, principally ^{240}Pu , giving complete flexibility for the measurement of plutonium and uranium in waste
- Measurement based on the differential die away (DDT or DDA) principle using thermalised neutrons from a D-T generator to create induced fissions in fissile material present in the waste
- System can be confirmed with HPGe gamma-ray based plutonium isotopic ratio measurement station, this provides a complete assay result
- In a non-moderating, non-absorbing (metallic) waste matrix the N2940-2552 is capable of achieving the USA TRU limit of 3700 Bq/g for the measurement of uranium and plutonium
- Long die-away time (>1 ms) and high neutron detection efficiency provide enhanced sensitivity
- System is constructed so that the ^3He tubes can be easily replaced, which enables ease of maintenance and enhances reliability

Specification

Approx. external dimensions (H x W x D)	1628 mm x 2458 mm x 1591 mm (64.09 in x 96.77 in x 62.64 in)
Weight	~8000 kg (1763.70 lb)
Die-away time fast detector packages	~40 ms
Die-away time (chamber)	~1-1.5 ms
Cd shielded detection passive mode detection efficiency	5% with empty chamber (approx)
LLD* for the measurement of ^{239}Pu** in an empty nACC chamber	10 mg
LLD* for the measurement of waste in a SWB containing a metal matrix of up to ~2 g/cc	100 mg ^{239}Pu
LLD* for the measurement of waste in severely moderating matrices	750 mg - 1 g ^{239}Pu

(* Active mode Lower Limit of Detection)

(**LLD for ^{235}U measurement in similar wastes are likely to be higher by approx. 50% across the board)

As part of an ongoing process of innovation, ANTECH® reserves the right to amend specifications without prior notice. Care was taken in compiling this document but ANTECH accepts no responsibility for its accuracy and reliability. It is acknowledged that all trademarks, logos and product data are the property of their respective owners.