

Previous model number: 2104

B2102 Series Fork Detectors


Introduction

ANTECH B2102 Series Fork Detectors are routinely used as inspection tools, for safeguards purposes, and to conduct non-destructive measurements to determine the radiation from reactor pond fuel rod assemblies while stored underwater.

Fork Detectors are used to measure neutron and gamma radiation activity from spent fuel assemblies. They are supplied in three different configurations:

- BWR used to measure Boiling Water Reactor fuel rods
- PWR used to measure Pressurised Water Reactor fuel rods
- VVER used to measure VVER fuel rods (currently used in Russia and the Ukraine)

The difference between the different types of unit is the inner distance between the tines of the detector head; the VVER option has the largest detector head and the BWR has the smallest. All other components are identical. The detectors are designed to be portable and easy to assemble to facilitate transportation between sites and quick set-up.

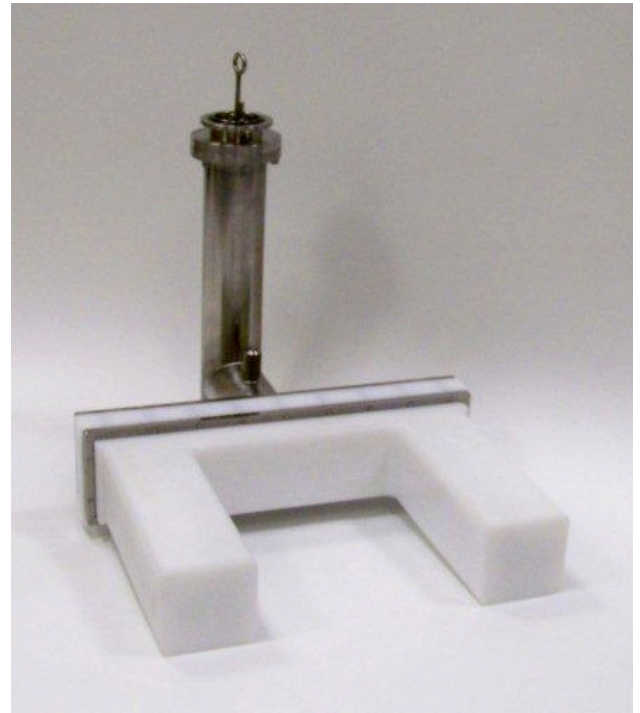

B2102 Series Fork Detectors are manufactured to meet the IAEA's requirements. Each unit consists of a detector head with integral electronics, a set of connection pipes with associated interconnect clamps, O-ring seals, interconnect cables and a mechanism for attaching the detector assembly to the pond gantry side rails. There are three output signals: two from the neutron detectors which are combined as a single output from the two fission chambers in each tine of the detector head, and one from the two ion chambers which is combined as a single output. These three output signals are fed into the counting electronics, such as a MiniGrand or MicroMesskanal.



Each detector can be supplied tested with nuclear sources (optional) and are delivered with full documentation and test records including a leak test report, Certificate of Conformance and manufacturers test records for preamplifier and detectors.

Features

- High density polyethylene detector head - PWR, BWR or VVER fuel configuration - to be specified by customer
- All external components manufactured from polished stainless steel and polyethylene
- Rugged cable construction with extra strain relief for connectors
- Water tight detector head and pipe assemblies (IP68)
- Supplied with 12000 mm (472.44 in) of extension pipes, connecting flanges, clamps and 'O' ring seals
- Mounting bracket for securing to gantry surrounding fuel pond
- Reusable and decontaminable shipping containers for the detector body, other components and pipe sections
- An essential spares and maintenance kit

Benefits

- Can be supplied as a system with all commercially available neutron counting shift registers
- Designed for ease of decontamination
- Easily assembled and dismantled for transportation between facilities
- Highly reliable detector electronics
- Components leak tested prior to delivery
- Detector head and extension pipes supplied in reusable type transportation containers
- IAEA or EURATOM configuration
- BWR and PWR detector components to a common design, apart from polyethylene detector head, enabling substitution of detector head geometries

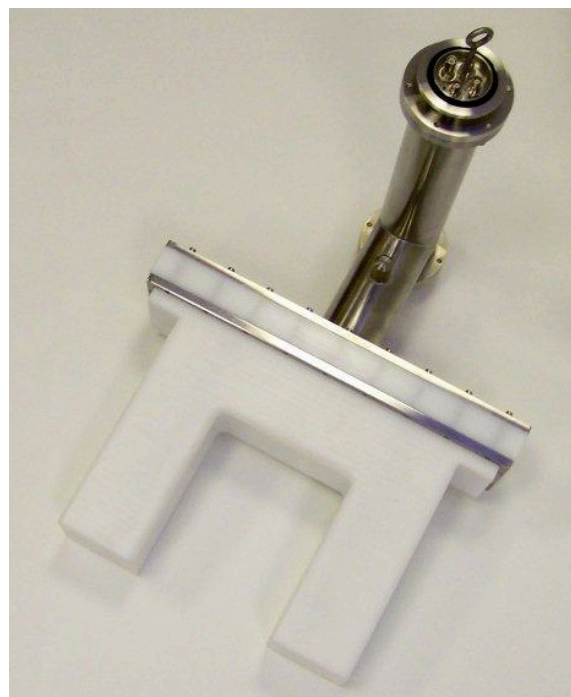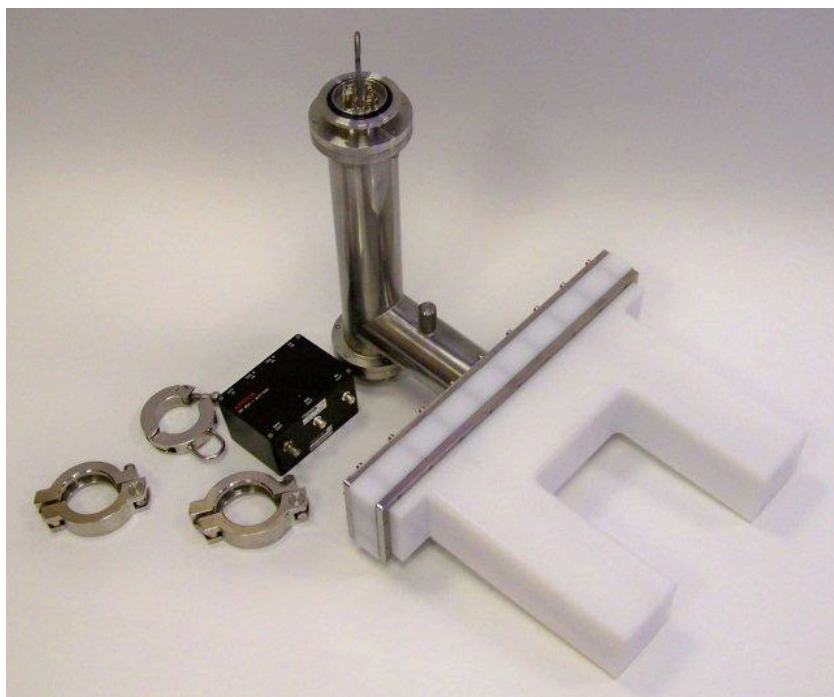

Specification

	Model B2102-BWR	Model B2102-PWR	Model B2102-VVER
Configuration	BWR	PWR	VVER
Dimensions between tines (mm) W x D	165 x 195	235 x 245	430 x 425
Neutron detectors	4 x RS-P6-0805-110 Fission Chambers with 127 mm (5 in) active length		
Gamma detectors	2 x LND Model 52113 Ion Chambers with 127 mm (5 in) active length		
Preamplifier	PDT 210A (or equivalent)		
Extension pipes	5 x 2000 mm (78.7 in); 1 x 1000 mm (39.37 in) length, 1 x lifting pipe		
Cables	RG174 multicore cable assemblies under a single common cover		
Nucleonics	Fully compatible with MiniGrand, Grand and MicroMessKanal counting electronics		

As part of an ongoing process of innovation, ANTECH® reserves the right to amend specifications without prior notice. Care was taken in compiling this document but ANTECH accepts no responsibility for its accuracy and reliability. It is acknowledged that all trademarks, logos and product data are the property of their respective owners.